



Fig. 17 - Setting the Enriching Device

- Raise the temperature of the water and make sure that the adjusting nut (6) moves away from the lever (5).
- When the water has reached a temperature of 80° deg.C. (176 deg.F), check that the distance between the lever and the adjusting nut is 3 mm (0.118 in.) approx.
- Stop the engine, unscrew the radiator filler cap and remove the thermometer (T).
- Refit the water temperature gauge sending unit and connect the electric cable.